

truss4bars

www.truss4bars.com

User's Manual

truss cover unbreakable 4 / 6mm

This manual applies to all lengths of the 4 / 6mm range

Introduction

Thank you for choosing a truss4bars truss cover. If you follow the instructions below, you will enjoy your product for a long time.


Check the product for any transport damage before first use. If you notice any defects, please contact your dealer.

Remove the protective film from the product.

CAUTION Danger of suffocation! The protective film must not get into the hands of children, as these could suffocate!

Safety instructions

The truss cover must only be mounted horizontally and is not suitable for overhead installation. The product is not intended for persons loads and must not be used as a stage, catwalk or similar.

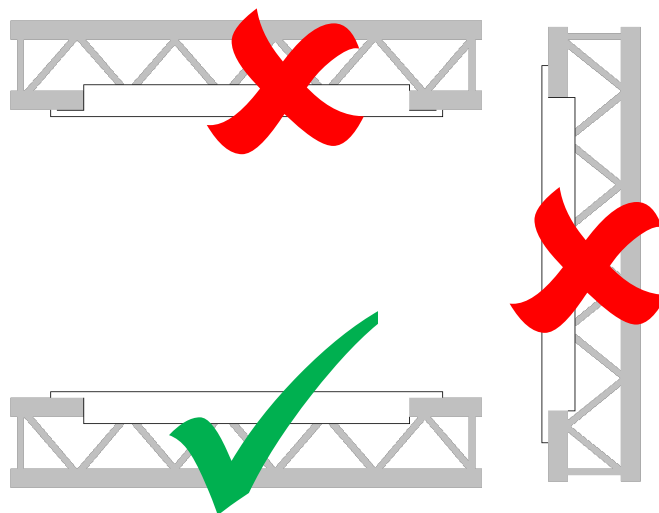

Use / mounting

The truss cover is mounted by light pressure on the truss. The connection points of the truss system must be released from the round recesses of the truss cover.

Make sure to only use truss covers for connection components (t-pieces, etc.) with the special lengths which are intended for them.



Avoid contact of the truss cover with sharp / pointed objects.

Cleaning

The truss cover can be cleaned with a soft sponge and lukewarm water under use of neutral detergent. Only use moist microfiber cloths or window leathers to dry. Never rub off dry.

Never use: Razor blades, spatulas or other sharp tools, abrasive cleaners, solvents, leaded gasoline and carbon tetrachloride.

Paint splashes, grease, etc. may be removed with ethyl alcohol or petroleum ether. The truss cover must be cleaned first as described. Rust stains can be removed with a 10% oxalic acid solution.

The truss cover has a good electrical insulation and tends to electrostatic charge. Treatment with antistatic products prevents electrostatic charging and dust attraction for a long time.

Service / Support

IN CASE OF DEFECTS, PLEASE CONTACT YOUR DEALER FIRST!

Contact:

kontakt@truss4bars.de

www.truss4bars.de

Manufacturer:

Heimes Media Consult

Obere Straße 7a

59929 Brilon

GERMANY

You can download and read the latest version of this user manual here: www.truss4bars.de

You can find the FAQ at: www.truss4bars.de/faq

Duplication and reprint only with the permission of the manufacturer!

Keep this instructions for future reference.

If you pass on the product to third parties, you must also hand over these instructions!

Printing errors, technical changes reserved without prior notice.

The operator is responsible for regularly checking the latest version of this manual.

© 2018